



Fiero Trunk Rust Repair

# Surface Rust

- Metal surface rusty with no soft areas or holes.



# Repair

- Clean Areas with a wire wheel.
- Paint area with POR – 15.
- Clean and paint outside.




# Minor Rust

- Rusty surface with some small or medium sized holes.



# Repair

- Remove soft areas.
- Clean Areas with a wire wheel.
- Patch holes with fiberglass kit.
- Paint area with POR – 15.
- Paint inside AND outside.

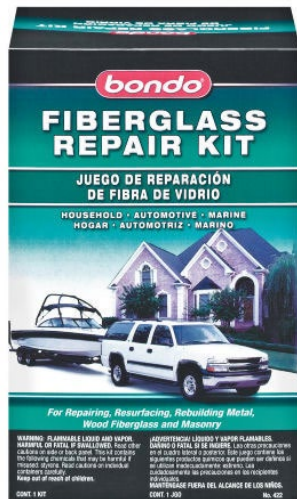

# Major Rust

- Whole sections rusted away.
- No structural support.



# Repair

- Cut out weak areas.
- New metal needs to be welded in.



# Major Rust Repair Cont.


- All areas inside and out to be wire brushed.
- Paint inside and out with POR – 15.





# Finished Repair

- Fiber glassed and painted.

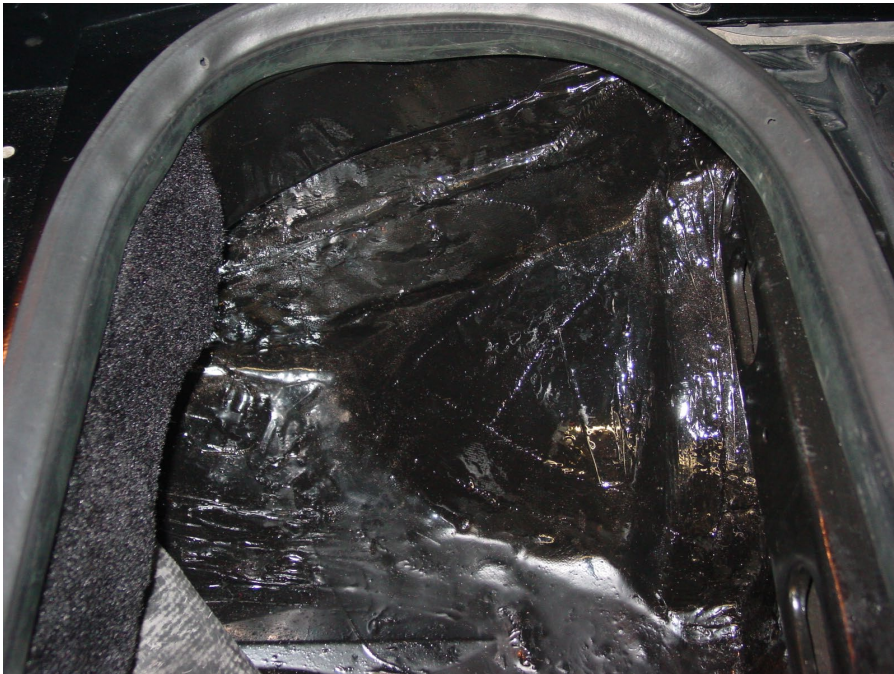

# Questions and Comments

